

Quick Start

K32+ Keypad

Off Light (orange*)

On = Disarmed
 Off = System armed
 *Some models feature a red LED instead of an orange one.

AC Light (yellow)


ON = Power on
 OFF = Power off

StayD Light (green)

ON = StayD on



= Press once + [MASTER CODE] for Quick Menu Programming)

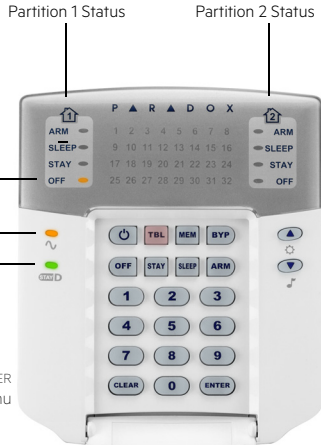

Arm (red), Sleep (yel), Stay (grn)

On = Partition armed
 Off = Partition disarmed
 Flash = Exit Delay
 Fast Flash* = Exit Delay (final 10 sec.)
 Fast Flash* = Partition in alarm

* Audible Indicators:
 Continuous beep = Alarm
 Variable beep = Fire alarm
 Intermittent beep = Beginning of exit delay
 Fast beep = Final 10 sec. of exit delay

[TBL] Trouble display
 ON = Trouble(s) occurring

[MEM] Alarm memory display
 ON = Alarm(s) occurred

[BYP] Bypass programming
 ON = Zone(s) bypassed

Zone Display:

The numbers [1] to [32] correspond to zone 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

How To Arm

Arming When Exiting

To arm your system when exiting:

Step	Description
1.	Close all zones in the desired partition.
2.	Enter your [ACCESS CODE]** or press the [ARM] key +[ACCESS CODE].

Arming When Staying

To Stay arm your system:

Step	Description
1.	Press the [STAY] key.
2.	Enter your [ACCESS CODE]**.

To Sleep arm your system:

Step	Description
1.	Press the [SLEEP] key.
2.	Enter your [ACCESS CODE]**.

To Disarm

[OFF] + [ACCESS CODE]**

** If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

Panic Alarms

To send a silent or audible alarm to your security company, press and hold one of the button combinations listed for three seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [7]
Fire	Press [7] & [9]

Trouble Display

When a trouble condition occurs, the [TBL] key will illuminate.

Step	Description
1.	Press the [TBL] key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2.	Read the corresponding explanation of the trouble from the trouble list in the control panel user guide. If no repair instructions are given, call your security company for repairs.
3.	Press the [CLEAR] key to exit.

Bypass Programming

Bypassed zones remain unarmed when the partition is armed.

Step	Description
1.	Press the [BYP] key.
2.	Enter your [ACCESS CODE]**
3.	The corresponding LED of all open zones will illuminate. Select the zone(s) you want to bypass by entering the two-digit zone number (e.g. zone 3 = 03). The corresponding zone LED will flash.
4.	Press the [ENTER] key to save and exit.

Alarm Memory Display

To view the alarms that occurred during the last armed period:

Step	Description
1.	Disarm the system.
2.	Press the [MEM] key.
3.	The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4.	Press the [CLEAR] key to exit.

Keypad Settings

To mute the keypad, press and hold the [CLEAR] key for six seconds to enable or disable Keypad Muting.

To modify the backlight:

Step	Description
1.	Press and hold the [▲] key for three seconds.
2.	The [MEM] key will illuminate.
3.	Press the [▲] key to set the desired backlight level.
4.	Press [CLEAR] or [ENTER] key to exit.

Chime Programming

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

Step	Description
1.	Press and hold the [▼] key for three seconds.
2.	Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone LED will flash. For example, to chime zone 2, enter [0] then [2]. The keypad will automatically save once the two-digit zone number is entered.
3.	Press the [ENTER] key to exit.